

## HOW TO USE THE INK EXPERTS 'TAPE-MATE' HEAT TAPE DISPENSER

### 1) TAPE-MATE AUTO DISPENSE AND CUT



The Tape-Mate includes standard and mini tape core holders. The standard core is most commonly used and holds up to 3x 10mm tape.



Remove the core holders from the back of the Tape-Mate dispenser. Have your heat tape roll unwound with the adhesive side facing up.




Fit the core holder and heat tape roll back into the Tape-Mate dispenser. Hold the tape so as not to lose the end.



Stick the heat tape to the underside of one of the auto cut reel sectional flaps.



Rotate the auto cut dispenser wheel **CLOCKWISE** to draw the tape through and begin cutting.

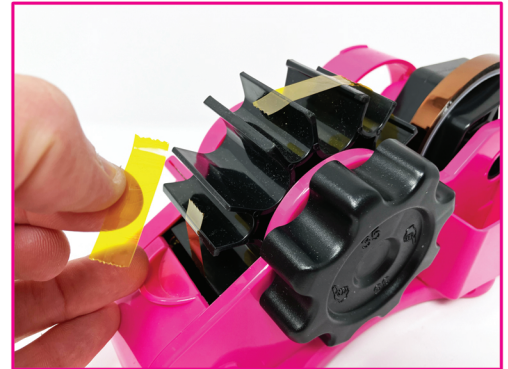

The auto cutter will cut the tape into 35mm lengths. Rotate the auto cut dispenser wheel to dispense and cut. Use as required.

### 2) TAPE-MATE STANDARD DISPENSE AND CUT



To use the standard dispenser and cutter simply release the cutting blade by sliding the blade cover switch to the right.



Place the heat tape roll onto the standard dispenser wheel.



Dispense by gently pulling on the tape and cut using the cutting blade.